

SPEC. SHEET

Thermocouple Transmitter

(with indication function)

Model: SE1F



How to order

1: 24V AC/DC

Specify the model (e.g.) SE1E-1-0

Default value

Input	K -200 to 1370°C	K -200 to 1370°C		
Output	4 to 20mA DC			

Accessories (sold separately)

Communication cable for the console software: CMB-001

Input specification

Thermocouple

Input resistance : $1M\Omega$ or more External resister: 100Ω or less, however, B input, 40Ω or less

Burnout : Upscale, Downscale

(Selectable by keypad)

Input


Thermocouple	Input range			
K	-200 to 1370 °C	-328 to 2498 F		
J	-200 to 1000 [℃]	-328 to 1832 F		
R	-50 to 1760 [℃]	-58 to 3200 F		
S	-50 to 1760 [℃]	-58 to 3200 F		
В	0 to 1820 [℃]	32 to 3308 F		
E	-200 to 800 °C	-328 to 1472 F		
T	-200 to 400 [℃]	-328 to 752 °F		
N	-200 to 1300 [℃]	-328 to 2372 F		
PL-Ⅱ	0 to 1390 [℃]	32 to 2534 F		
W5Re/W26Re	0 to 2315 [℃]	32 to 4199°F		
W3Re/W25Re	0 to 2315 °C	32 to 4199 F		

Minimum span: 50°C (100°F)

Output specification

When the output range lower limit is zero, (even if zero adjustment results in a negative value), the output value will not be negative.

C current						
	Output range	Allowable load resistance	Zero adjustment range	Span adjustment range		
	4 to 20mA DC	700Ω or less	-5 to 5%	95 to 105%		
	0 to 20mA DC	700Ω or less	0 to 5%	95 to 105%		
	0 to 12mA DC	1.2kΩ or less	0 to 5%	95 to 105%		
	0 to10mA DC	1.2k Ω or less	0 to 5%	95 to 105%		
	1 to 5mA DC	2.4kΩ or less	-5 to 5%	95 to 105%		

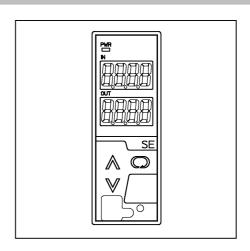

DC voltage

Output range	Allowable load resistance	Zero adjustment range	Span adjustment range
0 to 1V DC	100 Ω or more	0 to 5%	95 to 105%
0 to 5V DC	500 Ω or more	0 to 5%	95 to 105%
1 to 5V DC	500 Ω or more	-5 to 5%	95 to 105%
0 to 10V DC	1k Ω or more	0 to 5%	95 to 105%

Performance

Accuracy (When ambient temperature is 23°C):

Input:

Within $\pm 0.1\%$ of each input span, however,

R, S input, -50 to 200° C (-58 to 392° F): Within $\pm 6^{\circ}$ C (12° F) B input, 0 to 300°C (32 to 572°F): Accuracy is not guaranteed. K, J, E, T, N input, less than 0°C (32 $^{\circ}\text{F}$):

Within ±0.4% of each input span

Output: Within ±0.1%

Cold junction compensation accuracy: Within ±1°C at -5 to 55°C Indication accuracy: Within input accuracy ±1 digit

Input sampling period: 25ms, 125ms, 250ms (Selectable by keypad) Response time: 65ms (typ.) (0→90%) (Input sampling period 25ms)

225ms (typ.) (0→90%) (Input sampling period 125ms)

425ms (typ.) (0→90%) (Input sampling period 250ms)

(Selectable by keypad)

Temperature coefficient: ±0.015%/°C or less Insulation resistance: $10M\Omega$ or more, at 500V DC

(Input – Output – Power supply)

Dielectric strength: 2.0kV AC for 1 minute

(Input - Output - Power supply)

SE series



General structure

Case: Flame-resistant resin, Color: Light gray

Front panel: Membrane sheet Setting: By the front keypad


Connector for console software: Only for CMB-001

Indication: Input display: 7-segment, Red LED display 4-digit

Character size 10×4.6mm (H×W)

Output display: 7-segment, Red LED display 4-digit Character size 10×4.6mm (H×W)

Power indicator: Green LED

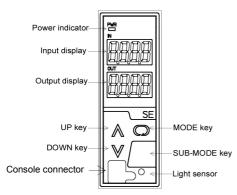

Installation specifications

Power supply: 100 to 240V AC 50/60Hz, 24V AC/DC 50/60Hz Allowable voltage range: 85 to 264V AC, 20 to 28V AC/DC

Power consumption: Approx. 6VA Ambient temperature: -5 to 55°C

Ambient humidity: 35 to 85%RH (Non-condensing)

Mounting: DIN rail mounting

External dimensions: W30×H88×D108mm (including the socket)

Weight: Approx. 190g (including the socket)

Attached functions

Auto-light function: Display brightness is controlled in accordance with the surrounding area. Unnecessary brightness is reduced, saving energy.

Power failure countermeasure: The data is backed up in nonvolatile IC memory.

Self diagnosis: The CPU is monitored by a watchdog timer, and when an abnormal status is found on the CPU, the unit is switched to warm-up status with tuning all outputs off. Cold junction compensation: Available

Environmental specification

RoHS directive compliance

Settings

Function keys

- (1) UP Key: Increases the numeric value,
- (2) DOWN Key: Decrease the numeric value,
- (3) MODE Key: Selects the setting mode,
- (4) SUB-MODE Key: Turns the displays ON again when they are in OFF status.

(The UP, DOWN or MODE Key also turns the displays ON again when they are in OFF status,)

Displays and indicators

Input display: Indicates the input value

Indication of -200.0 or less (for the range with decimal point):

The minus (-) sign and input value light alternately.

Under range: "flashes on the input display " flashes on the input display. Over range: "

Warm-up indication: For approx. 3sec. after the power to the instrument is turned on, the input type is indicated on the input display, and Output type is indicated on the Output display.


Output display: Indicates output volume in percentage (%) form. Power indicator: The green LED lights when the power to the instrument is turned on.

Solderless terminal

Y type 4 max



■ Circuit configuration and terminal arrangement

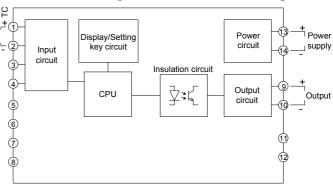

■ External dimensions (Scale: mm)

